


YA-D8-1

# **User Manual**

## **Total Chair Bed**

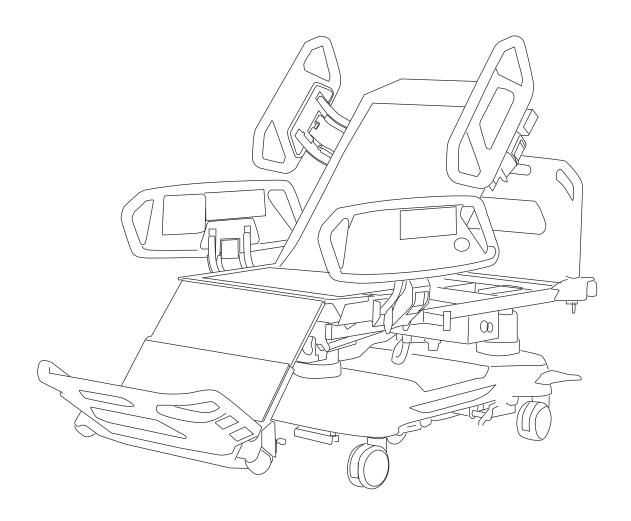



# Table of contents

1.General Attentions	1
2.Safety	2
3.Proper Use And Application	3
4.Introduction	4
5.Description Of Parts	5
6.Technical Data	6
7.Transport And Unpacking	8
8.Installation And First Use	. 10
9.Evaluation Criteria	. 11
10.Application Of Product's Function	. 12
11.Central Brake System	. 13
12.Electronic Controller	14
13.Bed Positioning	. 16
14. Bed Extension	. 17
15. X-Ray Examination	. 18
16. CPR	. 19
17. Side Rail	. 19
18. Head/Foot Board	. 19
19. Accessory Assembly And Use	. 20
20. Damages And Defects	. 20
21. Repairs And Maintenance	. 21
22. Cleaning And Disinfecting	. 22
23. Trouble Shooting	. 23
24.Storage	. 24
25 Products Scranned	24

### 1.General Attentions

#### **Dear Clients**

Great appreciation to you for choosing this bed from our company, we wish you would find much satisfaction while using it. Please read this manual carefully, in which includes all the significant information and attentions to guide proper installation and operation of the product as well as its servicing.

#### **GeneralAttentions**

- The use, maintenance as well as servicing of this product are performed in any other ways than those, which have been stated in this manual is not allowed and may result in damages, which will encumber the user and which will not be a matter of producer's responsibility.
- Any consequences resulted by those users who are not trained with the manual are derelict of duty by our company.
- When parameters of the product do not match the description in item 'technical data' in this manual, the use of the product is not allowed and any defects have to be reported to the producer or the supplier.
- Every repair of the product must be done by manufacturer or the authorized organ and recorded on the
  list of repairs, which is supplied with the guarantee certificate. Disregarding this requirement will cause
  the guarantee for the product to be invalid. (The concerned matters of repair are referred to the
  maintenance manual.), before starting any repair the cable must be disconnected from mains.
- The sign shown below means: 'caution pay especial attention to the operating manual'.
- This sign is placed on any parts or mechanisms, which may prove to be harmful to the patient or the personnel if their operation does not comply with the descriptions in the operating manual.
- All rights are reserved to zhangjiagang medi medical equipment co., ltd. This manual should not be reproduced or transmitted without our prior permission.
- The producer reserves the copyright and the right to make changes in this user manual due to technical changes or improvements of the product. The contents of this manual may differ in minor detail from the basic product design.

Zhangjiagang Medi Medical Equipment Co., Ltd

### 2.Safety

- The structure of the product assures its safe operation on condition that the rules comprised in this
  manual are followed.
- 2. Prior to use, the user should read all following safety introduction and check all bed's functions item by item according to this manual. Make sure that there are no problems then bed can be used.
- 3. The total weight of a patient and additional accessories installed on the bed should not exceed 200kg; the weight of the patient should not exceed 175kg. If in a short period the load of the bed exceeds 200kg due to the cardiopulmonary resuscitation, please lower the bed pallet to the lowest position.
- 4. This bed is designed for patients, any other person is forbidden to sit on it.
- 5. The height of the patients shall not exceed 200 cm.
- 6. The functions which may cause harm to patient must be locked when patient is left without medical supervision.
- 7. If the patient's state (e.g. disorientation for medical or clinical reasons) may lead to patient's entrapment, the pallets should be placed in a flat position if the patient is left without medical supervision (except individual medical advice or particular circumstances).
- 8. If the patient can not be level-headed, please lock the side rail controllers to avoid false manipulation injuring the patients.
- 9. When bed is not transferring, please use the castor lock lever to lock the bed, otherwise the patient may be hurt when their going up and down or lying in the bed.
- 10. The user should avoid the danger to safety caused by the improper link of cables connected to mains, e.g. stretching or extruding the cables.
- 11. The user should avoid the wire is pressed under the castor, cables squashed between the foot board or the head board and the moving parts.
- 12. If there are using equipment or frequently used equipment near the bed, or the bed is at a cardiac chair position, the operation must comply with the descriptions in this user manual; otherwise it might cause a series of serious accidents. For instance, the metal parts or other equipment might cause serious harms to patients.
- 13. If the patient is left without medical supervision, in order to decrease possible risks caused by patient's falling down when going up and down from the bed, please adjust the bed to the lowest horizontal position.
- 14. When one adjusts positions of bed, caregivers should take care to eliminate the risk of entrapment of patients, for the movements of any bed segments may cause changes of the position of the bed and the equipment around.
- 15. Make sure that the extension of the bed is locked after extending it. Otherwise there will be fatal danger in the process of patients' transferring. Caregivers are responsible for the complete locking of extension of the bed.

- 16. Manual cpr is extraordinarily important due to be used of rescuing patients. Caregivers should check whether they are in proper operating condition frequently. If not, please report to the service person in order to renew it as soon as possible. If caregivers do not report the possible malfunctions betimes, they should be responsible for all results caused by it.
- 17. When side rails are folded or upright, caregivers should pay attention to the safety of patients and themselves as well as other things because the general framework may clamp their hands, wires in side rails or any other things.
- 18. When the bed is elevating, caregivers should make sure bed's elevation will not interrupts equipment around which will lead to dangers; also the bed's lowering will not make equipment below squeezed.

## 3. Proper Use And Application

#### **Application**

YA-D8- 1 hospital electrical bed is designed for mid to high acuity patients population

#### **General requirements**

The bed should only be used in an internal environment where:

The ambient temperature ranges from + 10°c to +40°c (ambient temperature change range is less than 20c in 8 hours).

The relative humidity ranges from 20% to 80%.

The atmospheric pressure ranges from 860 to 1060 hpa.

The product should be used according to the indications of this manual.

The bed should be maintained and serviced according to special service manual.

#### Caution:

- Using, maintaining and servicing of the product in other way than indicated in this manual are not
  permitted and may lead to damages, for which the user is to be blamed and for which the producer is
  not responsible.
- Installation of any other accessories not offered by the producer is allowed only on the basis of a written acceptance of the producer.

#### **Duties of user**

- User: any individual or corporation who uses the product.
- The user must ensure that the product shall be used exclusively in conformity with its destination and in appropriate conditions in accordance with this manual.
- The user is also obliged to take any necessary precautions in order to prevent any life and health hazards concerning the user, patients and any third party.
- Only authorized persons who underwent special training and peruse this manual can operate this
  product.
- The user must also ensure that any person who operates this product has read, understand and will follow the instructions included in this manual.

### 4.Introduction

Ya-d8-1 hospital electrical bed is designed and manufactured by zhangjiagang medi medical equipment co.,ltd., which can be used in several kinds of icu ward, it also can be applied to top grade ward, vip ward as well as healing ward due to its multifarious functions and adaptability.

The electric actuators can adjust the movements of backrest, leg section, height, trendelenburg, reverse-trendelenburg, and bed extension as well.

It is easy to take x-ray picture from back board to thigh board with x-ray translucent pallet and x-ray cassette tray, the optional scale system reaches precision up to 100 grams, absolute and differential weight can be measured continuously, the bed is mounted on lockable, steerable castors for easy movement.

#### The bed is designed and manufactured in conformity with:

Yy0571/iec60601-2-38 particular requirements for the safety of electrically operated hospital beds, gb9706. 1/iec60101-1 safety requirements for medical electrical systems.

The manufacturer operates under quality management systems certified in accordance with: en iso 9001 and en iso13485.

## **5.Description Of Parts**



- 1. Foot board
- 2. Sit side rail(side rail close to foot board)
- 3. Interior control on the sit side rail
- 4. Bed surface
- 5. Back side rail(side rail close to head board)
- 6. Angle indicator on back side rail
- 7. Handle for mechanic cpr quick release
- 8. Head board
- 9. Iv pole socket

- 10. Castor
- 11. Central brake pedal for casters
- 12. Angle indicator on sit side rail
- 13. Brake pedal for 5th steering caster
- 14. Extensive foot section
- 15. Bumper casters
- 16. Exterior control on the sit side rail

## **6.Technical Data**

#### **1.Mechanical And Operating Parameters**

Parameters	Description	YA-D8-1
Length×width	1960×9000 mm	•
Overall length×width	2020-2230mm x 1050mm	
Maximum height	950 mm	•
Minimum height	550 mm	•
Angle of backrest adjust	75°±5°	•
Angle of thighrest adjust	35°±5°	•
Bed extension	200mm	•
Back cpr	Manual	•
Tr/anti-tr position	14°± 1°	•
Central controller(lcd touch screen	Optional	•
With patient scale system)		
Exterior control on the sit side rail	Each side	•
Interior control on the sit side rail	Each side	•
X-ray examination	Back	•
Castors diameter	Mm	125
Central brake		•
Scale system precision	100g	0
Removable head/foot board		•
lv pole holder	Each corner	•
Bumper caster	Each corner	•

#### ■ - Standard; O - Optional;

#### 2. **Electricity Parameters**

Parameters	YA-D8-1	
Rated voltage	50-60Hz /220V-230V; 50-60HZ/ 110V- 120V	
Input power	368VA	
Protection against electric shock	Class I/ B	
Protection degree	IP-X4	
Usage period	10 Year	

#### 3. Critical Parameters

Parameters	Description	YA-D8-1
Maximal workload	kg	225
Maximal load of IV pole	2 kg each hook	•

#### ● - standard; O - optional;

## 7.Transport And Unpacking

#### 1.Transport

There is a possibility to transport the product by any covered transport means, it can be transported by highway, railway, waterway, and air transportation. While transporting, it is necessary to immobilize the truck and protect it against water and moisture. The transport conditions are as follows:

Temperature:	from – 10C to 60C,	
Relative humidity:	from 20% to 80%.	
Atmospheric pressure:	from 860hPa to 1060hPa	

In the process of products' transporting, storage and unpacking, the temperature gradient should be less than 10C per hour.

(It is recommended to unpack the product after reaching room temperature.)

#### 2. Attention Must Be Paid To The Following:

In case of a significant difference between transport and storage temperatures, the product should be left for minimum 12 hours before putting it in motion.

Storied storage is required in accordance with the packaging marking.

In case of the specific transport conditions (particularly excessively low temperature), it is necessary to negotiate with the manufacturer or local agent in order to ensure the products' transportation safety.

#### 2.1 Unpacking

The bed is shipped in an assembled form in a wooden case and castors have been locked. The mattress is packed with ldpe plastic casing and the bed is packed with polyethylene foam to avoid damage during the transportation. The bed should be unpacked indoors in order to prevent from damages.

One who uses this bed for the first time should accomplish the preparations as follows:

7.3. 1 mark the fittings and make a record;

7.3.2 remove the materials protecting the bed.

#### 2.2 Attention Must Be Paid To The Following

Packaging waste is recyclable and should be segregated before removed to a disposal site. Unpack and assembly as followed orders:

Take out affiliated components and put them aside.

Release castor stops.

Release the castor lock lever (as described further in this manual).

Take the bed from the pallet carefully and stop it with the help of another person.

#### Caution:

- When moving the bed, do not hold the plastic components to avoid damages.
- The bed should be uplifted from the wooden box totally. It's forbidden to unblock the central brake system and push the bed out of the wooden case, for which will cause damages to the cables of actuators below the base.

Check whether the equipment provided fit the documentation enclosed.

Put the product in its destination which meets the requirements set in this manual.

Read this user manual carefully.

Start up the product as described in item: 8. Installation and first use.

#### **Caution:**

• If the functions of the bed are not consistent of the data in the manual, the use of the bed must stop and this situation should be reported to manufacturer or supplier, using inefficient product may lead to damages, which burden the user and for which the manufacturer do not take responsibility.

### 8.Installation And First Use

#### Place the bed in the needed working room, Block castor lock lever.

#### Caution:

- All electric devices connected directly with the patient should be connected with potential equalization installation.
- In case of potential equalization installation lack in the bed installation place these devices should be connected by means of potential equalization wire with potential equalization socket in the bed connecting panel.
  - The weight scale system can be operated normally after open the knobs which protect the weight sensors that is under the cover.
  - Rotate emergency button, the main box will connect with the battery box with a buzzer.
  - Check all controllers that are connected well(the touch screen, side rail controllers and the foot controller).
  - Check lock functions of touch screen and side rail controllers that is correct.
  - Check inclination angle of back board and thigh board.
  - All movements executing accordingly to descriptions enclosed relating chapter 13.
  - After check all functions, connect the bed to the mains and make sure the power supply is in gear, bed's mechanisms should be silent and smooth without stopping and creaking during executing all
  - Checking functions. The noise of mechanisms and electric actuators should not exceed 65db(a) at the distance of 1 meter from the bed.
  - Head board and foot board are connected through inserting to the reserved corresponding jacks.(see chapter 18)

#### Caution:

• Only when the bed is installed and make sure there is no any short circuit or wrong connection one can electrify and check it.

#### Caution:

• If the bed can not work properly or the mechanisms can not work smoothly and silently it is not allowed using the bed, such a situation must be reported to the producer or supplier, using inefficient product may lead to damages, which burden the user and for which the producer do not take responsibility.

### 9. Evaluation Criteria

#### Correctness of bed functioning shall be checked before the first start up.

The method of checking whether the functioning of the bed is correct:

- Check stability of the bed when its wheels are locked by trying to move the bed manually: pushing the bed should not cause tilting or moving in any direction.
- Check the activity of all bed functions, which are performed in full range of movement data (height and angle adjustment of the pallet, angle adjustment of backrest and thigh rest).
- During every checking activity described in this item, the bed mechanisms should work quietly
  and smoothly, without scratches, creaks and the like. The bed mechanisms and electric actuators
  during the work emit the noise which does not exceed the value of 65db (a) in a distance of 1 meter
  from the bed.
- Check the correctness of the all electrical steering elements (including touch screen, side rail controllers and foot controllers).
- Check the correctness of all blockade functions.
- Check the weight scale system. Place a greater than 1 kg of goods to the central bed board; see the changes in weight data(optional)

If the bed underwent the above described tests with positive results and there were no disturbing sounds (squeaks and grinds), the bed can be used safely.

## 10. Application Of Product's Function

Bed height adjustment: the pallets can be vertically adjusted between 550mm and 950mm.

**Bed's angle inclination (trendelenburg and anti-trendelenburg position):** the bed can be tilted to trendelenburg or anti-trendelenburg position in 14°, the reverse-trendelenburg one can provide better drainage for the patient after operation, while the trendelenburg can heighten the quantum of the blood supplies to the heart and brain.

**Backrest adjustment:** the back segment can be adjusted at a 75° angle, which is convenient for patients and caregivers to choose an appropriate position, especially for thoracic and celiac drainage as well as ascites.

**Thigh rest adjustment:** the thigh segment can be adjusted at a 35° angle in order to cure and caregiver the patient with lower limbs disease, reduce the pressure of the lower limbs and the abdomen to avoid the wound split.

**Auto-regress:** the back rest and the thigh rest will be retractable when they are folded up, which can make the patients feel more comfortable by reducing the pressure on the back and the abdomen to avoid the bedsore and the wound split as well as prevent the gliding of the mattress and the patients. The back board's minimum movement distance is 60mm, while the thigh rest segment's is 40mm.

**Total chair position:** this total chair position is used for patients leaving bed more easily under the process of recovery, also assisting the caregivers to work more efficiently, this position can be realized by one single button

**Fowler position:** fowler position can be achieved by one single button

**Cpr function:** both mechanic and electric cpr functions are available on this bed, the mechanical cpr can be realized by the levers on both sides of bed, while the electric cpr can be realized by one single button

Bed extension: the bed can be extensible to suit the patients in different heights

**X-ray examination:** there is a x-ray cassette tray under the back section, and the c-arm photography examination is also permitted onto the bed

## 11. Central Brake System

The bed is equipped with a caster lock lever, by which the caster can be locked and unlocked with one motion, the bed is also equipped with fifth castor allowing easier movement of the bed in narrow Spaces, such as passing in and out the lift, entering and leaving the ward etc.

#### The central braking lever can be set to two positions:

- 1. Unlock: as seen in fig11.1, step down the green pedal, all casters are unlocked, the bed can be moved.
- 2. Lock: as seen in fig11.2, step down the red pedal and all the casters are locked.
- **3. Steer:** as seen in fit.11.3, step down the green pedal of the 5th steering caster, the 5th steering caster touching the ground, and the bed can be moved in a straight way.





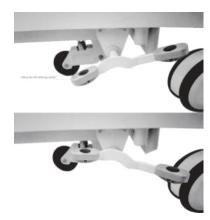


Fig11. 1 Fig11. 2 Fig11. 3

#### **Caution:**

- 1. Before moving bed, one shall disconnect it from mains and adjust the bed to horizontal level.
- 2. The floor under the bed must be free of obstacles.
- 3. Avoid any collisions during the bed maneuvering as it may cause damages to the scale sensors.

## **12.Electronic Controller**

#### The electronic controller of bed includes:

- 1. Interior control on the sit side rail (see 12.1)
- 2. Exterior control on the sit side rail (see 12.2)

#### 12.1 interior control on the sit side rail

Main functions of interior control on the sit side rail (fig. 12.2)

- 1. With night light control
- 2. With control for movements of back and leg section

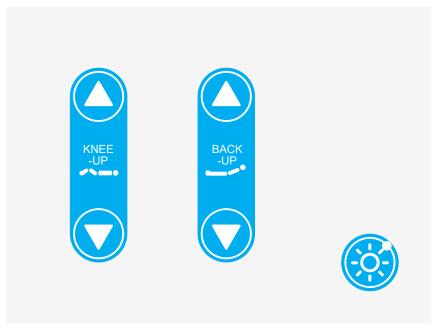


Fig. 12.2

#### 12.2 Exterior control on the sit side rail

Main functions of interior control on the sit side rail (Fig. 12.3)

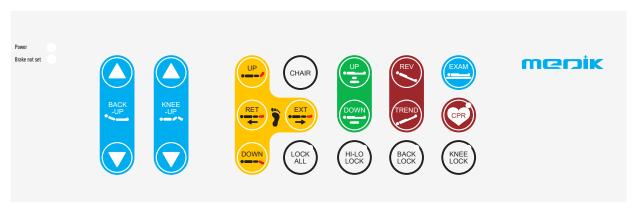



Fig. 12.3

- 1. One single button for examination position( flat)
- 2. Reverse-trendelenburg
- 3. Elevation of bed
- 4. One single button for total chair position
- 5. Elevation of foot section
- 6. Electric cpr function
- 7. Trendelenburg
- 8. Lowering down of bed
- 9. Extension of foot section

- 10. Indentation of foot section
- 11. Locker for movement of leg section
- 12. Locker for movement of backrest
- Locker for movements of height adjustment of bed
- 14. Locker for all the movements
- 15. Lowering down of foot section
- 16. Adjustment of leg section
- 17. Adjustment of backrest

## 13.Bed Positioning

- Regulation angle of backrest: 0-75°±5° (fig 13.1)
- Regulation angle of knee: 0-35°±5°
- Hi-lo: 55-95cm (fig.13.2)
- Trendelenburg and reverse trendelenburg 0 to 14°± 1° (fig. 13.3)
- Total chair position by a single button (fig. 13.4)
- · Cpr: by mechanical levers located on each side of the bed, in a single step to perform cpr procedures
- Electric cpr via a single button on the control panel
- Fowler position: via a single button on the control panel

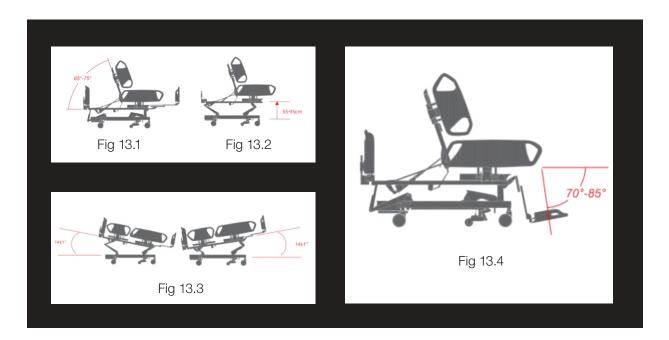


#### Caution:

- If patient is on the bed without any caregivers' supervision, the bed should be in the lowest position to prevent the risk of patient's falling.
- When adjusting bed basic positions, make sure that there is no part of the body squeezed between the patient surface and the frame of the bed.
  - One should be careful while performing function changing, the segments moving may
    cause fingers or palm to be crushed, when adjusting, please do not rest your palm on the
    bed elements near the hinge.
  - Attention must be paid to kinds of tubes and pipes which are connected to the patients, in order to avoid accidents caused by separating patients from the tubes and pipes.
  - If patient is on the bed without any medical personnel supervision or any position changing is forbidden, the bed should be in horizontal position.

## **14.Bed Extension**

YA-D8-1 is with extension at the foot board by 20cm as shown in the following pictures.

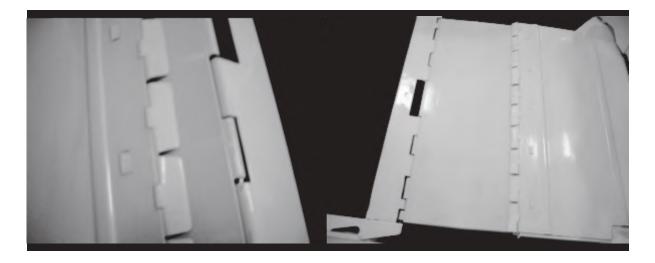

## **15.X-Ray Examination**

Height adjustable between 55~95cm, It can meet various needs for different exam or treatment.







And due to the ideal space provided under the bed platform, C-arm photography examination is also accessible.



### **16.CPR**



Pull cpr handle outward, The backrest will quickly return to horizontal position.


#### Caution:

Cpr is essential for patient's reanimation, caregivers must regularly check whether cpr is out of work, it's very important to report to the manufacturer if it is found out of work, caregivers will be responsible for all the results caused by not finding or not reporting to the manufacturer that cpr mechanism is out of work.



Electric cpr also available on the exterior control of sit side rail

### 17. Side Rail

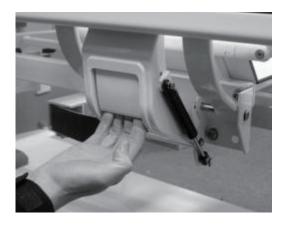

#### Segment side-rail

- 1. Fold down the side rail: pull cpr handle outward as fig, the siderail will be folded.
- 2. Fold up the side rail: pull upward the side rail and it will be upright. When you hear a sound "pa", the side rail is locked.

### 18.Head/Foot Board



As shown in figure, head board/foot board is easily installed and removed, when installing and knocking down the head board/feet board, please energize symmetrically.

## 19. Accessory Assembly And Use

#### 1.IV Stand





There are four IV stand sockets in the corners.

#### 2. Urine bag holder



There are 2 hooks on each side of bed, total is 4.

#### 3.Extension mattress

Refer to chapter 14, Pull out the extended bed, Will be placed in extended position of extension mattress.

## 20. Damages And Defects

Damages and defects found in the product or accessories should be reported immediately to one who is in charge of such issues, The bed which can not be safely operated (damaged electric or manual elements) must not be used till it is repaired.

## 21. Repairs And Maintenance

Repairs must be done by the producer or an authorized service. The user can not carry out any repairs on his own unless he has undergone special training or has been authorized to do that.

To provide safe and reliable operation of the product, one should use only spare parts provided by the producer. Worn out parts shall be removed as provided in environmental protection regulations.

#### Caution:

- 1. The product contains elements which may be harmful to the environment: oil (pneumatic spring), gel battery.
- 2. Please deal with these used products according to local rules.

Every repair of the product must be recorded on the list of repairs enclosed with the guarantee certificate. Disregarding this requirement will cause the guarantee for the product to be invalid.

To ensure the safety and stability of the bed, regular check of the bed by the producer, authorized service or personnel is necessary.

#### Caution:

- 1. Service and repairs should be recorded on a list of repairs enclosed with product guarantee certificate.
- 2. Only a positive result of product inspection can be the basis for its further operation.

Items to be checked	Frequency
Checking the overall technical condition (according to service manual) checking the insulation of network	Every year

In order to ensure safe and proper operating and longevity of the product, every six months the following actions should be performed.

	Testing screw joints	
Base	Testing the performance of the central lock and the traction system	
	Testing the electric system of steering	
Structure	Testing screw joints and protections on the ball pins	
	Lubricate with the lubricant obeen uf3 from optimol (supplier: castrol)	
	Testing mechanism of pulling aside of bedside rails	
	Testing work of electric actuators	
	Check the function of manual cpr and entire lock of bed extension	
	Check whether the head/foot board can be disassembled	
Controller	Check the performance of side rail controller and the touch screen	

The checkout should be performed by visual inspection and the noticed malfunctions should be handled as in "Trouble shooting" .

## 22. Cleaning And Disinfecting

#### 1.The Cleaning and disinfecting of Mattress

Use alcohol to disinfect the bed, after disinfecting, wash the product with distilled water to remove stains, after disinfecting, dry it thoroughly, dry it with hot air (max.temp.60°c) or wipe it with a soft sterile cloth.

#### Caution:

- 1. Cleaning and disinfecting should be carried out only when necessary using the minimal amount of fluid.
- 2. The product must not be disinfected in disinfecting chambers.
- 3. Bleaching (containing active chlorine or oxygen), caustic and corrosive agents must not be used.
- 4. It's forbidden to clean plastic elements with organic solvents
- 5. Before cleaning or disinfecting disconnect from mains!
- 6. During cleaning and disinfecting of controllers, be particularly careful, if the control gets drenched, dry it as soon as possible and dry its edges with a cloth.
- 7. Disregarding the above requirements concerning cleaning and disinfecting shall result in losing the guarantee for the product.

#### 2. The Cleaning and disinfecting of Mattress

The mattress consists of the cover and inner cushion, wash them separately, the cover of the mattress is made of a cotton or steam-permeable cloth, the inner cushion is made of polyurethane foam which can be removed from the cover after it's unzipping, information on the quality of the cloth and washing conditions is provided on a label on the cover of the mattress.

#### 2.1 Mattresses jacket

- 1. Maximum temperature 95°, ordinary washing machines, general cleaning and washing the general roll.
- 2. Not directly ironing may use steam ironing.
- 3. Not use organic solvents and chemical decontamination reagents.
- 4. Not use chlorine bleach.
- 5. Not rolling dry.

#### 2.2 Inner cushion(polyurethane foam)

Wash them with mild detergent, it's allowed to disinfect for 15~20 minutes with the steam sterilization where the pressure is 0.25kp/cm2 and the temperature is 105 °c at maximum, cleaning should be completed in 70°c for three hours drying.

- 1. Not roller washing.
- 2. Not used in reactive oxygen species and reactive chlorine bleach.
- 3. Not use organic solvents and alcohol.

Warning

violation of the matters related cleaning and disinfection above will result in losing the guarantee for the product .

## 23. Trouble Shooting

Fault	Possible causes	Remedy
The bed does not move	Locked wheels	Unlock the central lock
The bed cannot	The 5th steering caster not touching	Step down the pedal for steering
be steered	the ground	caster again
The controlling	Power cord disconnected from	Connect the power pug of the bed to
system is out of work	mains and battery is low	power point.
	Damaged controlling system	Report to the manufacturer
One or few of	Plug of the actuator is not	Check the connection between the
actuators are not working	connected well with the main box of	plug of the actuator and the main box
	controlling system	of controlling system
	It's locked by some locking buttons	Unlock
	Damaged actuators	Report to the manufacturer
Bed does not move	The software does not run in order	Restart the controlling system by
at all with sound of alarm		disconnecting the cable connection
		between the battery box and the main
		box of the controlling system and
		connecting them again.
The height of the bed	The bed is over loaded	Reduce the load to less than swl225kg
can not be adjusted	The battery is low and the power	Connect the power plug of the bed to
	plug is not connected to the power	the power point on the wall
	point.	
	The lifting actuators is damaged	Report to the manufacturer

#### **Caution:**

- If troubles can not be shot according to the methods in the table, please notify the supplier immediately.
- Do not try to replace or change the equipment by strength.
- Producer takes no responsibility for ignoring the warnings above.

## 24.Storage

#### If not to be used for a long time, it should be stored in the following conditions:

Temperature: -10c~+60c (best temperature suggested:25°± 10c)

Relative humidity: 20%~80%

#### **Attention:**

- · Periodically wash and preserve stainless steel elements with paraffin oil.
- Washing and preservation operations shall be repeated every three months.
- Disconnect the power plug to the power point and disconnect the connection between the main box of controlling system and the battery box

## 25. Products Scrapped

According to the environmental protection ordinance, all of these products are environmental pollutants (whether disinfected or not), the users have obligation to deal with the products scrapped in the right way.

#### **Process:**

- 1. Give the product to company with environmental approach to the use of scrap materials.
- 2. Give the product to Manufacturers with environmental approach to the use of scrap materials.
- 3. Give the product to the corresponding authorized bodies or transshipped to manufacturers to disposal

#### **Attention:**

- Remove batteries[Harmful substances]
- Disassembling the electronic components
- Removal of electronic devices
- Remove plastic parts
- Remove metal components
- Remove the processing components:
- Demolition should comply with the Environmental Protection Ordinance

## **CONTACT US**





Pls scan the QR code for more info

← +(86) 139 6223 1292

info@medik-medical.com info@mediksurgical.com

www.medik-medical.com www.mediksurgical.com

